## **LEGUAN** 125/110-2 QUICK OPERATOR TIPS

( NOTICE: Operators Manual must be read carefully before the use of the lift. )

## **BEFORE STARTING DO AS FOLLOWS:**


- 1. MAKE SURE THAT THE GROUND IS SOLID. ( LIFT AND SUPPORT FORCES )
- 2. MAKE SURE THAT BOTH BOOMS ARE <u>TOTALLY LOWERED</u> LAYING ON THEIR TRANSPORT SUPPORTS. If they are not down, press emergency lowering button (4) on the platform and simultaneously use the boom operating levers. (1)
- 3. MAKE SURE THAT SWITCH SW 1 IS ON MIDDLE OR DOWN POSITION. (10)
- 4. MAKE SURE THAT ELECTRIC MOTOR / HONDA SWITCH (2) IS ON RIGHT POSITION.
- 5. CHECK THAT THE HONDA KEY IS ON I POSITION. (20)
- 6. TURN THE RED MAIN SWITCH ON (14) RELEASE THE EMERGENCY BUTTON. (turn it) (6)

## STARTING AND OPERATING

- 1. PRESS THE GREEN START BUTTON (3) AND ELECTRIC MOTOR OR ENGINE RUNS. (Starting electric motor a short bump of START button is enough). If Honda engine is cold use choke. (17)
- 2. SW 1 ON MIDDLE POSITION YOU CAN DRIVE THE LIFT. (10)
- 3. PUSH SW 1 DOWN POSITION WHEN SETTING THE OUTRIGGERS. FOLLOW THE RED LED LIGHTS (12). <u>ALWAYS</u> OPERATE TWO OUTRIGGERS AT A TIME.
- 4. WHEN ALL THE REDS ARE OFF (12) THE GREEN LIGHT WILL ILLUMINATE. LIFT SW 1 (10) UP TO ACTIVATE LIFTING OPERATIONS. Remember to check from the bubble level (7) fixed on the top of the lower boom that the lift is levelled correctly.
- 5. NOW THE BOOMS CAN BE OPERATED.
- 6. End of the day turn the main switch off (14) and the Honda key (20) to O position.
- 7. In order to prevent unauthorized use take the keys with you.

LIFT HAS A SET UP CONTROL SYSTEM - ALWAYS USE SUPPORT OUTRIGGERS!

SEE BACK SIDE

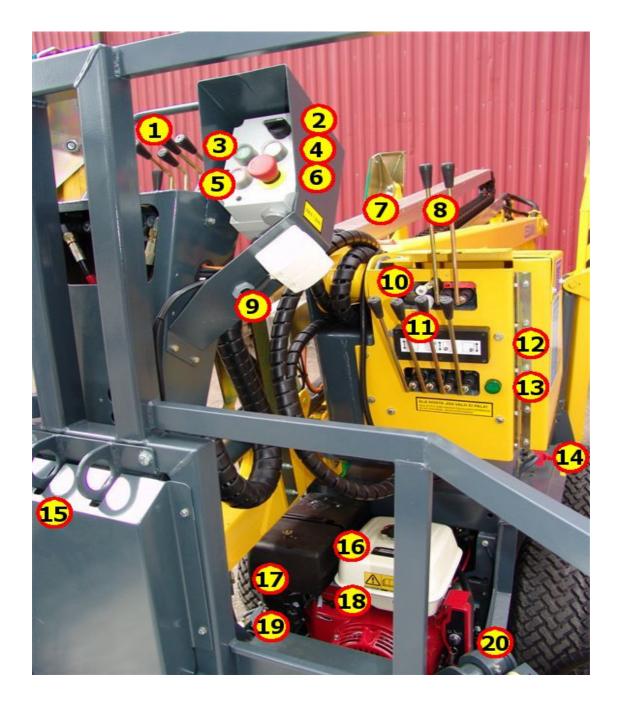

- 1. Boom Control Levers
- 2. SW Electric Motor / Honda
- 3. Start
- 4. Emergency Lowering
- 5. Stop
- 6. Emergency Stop
- 7. Bubble Level Indicator
- 8. Wheel Driving
- 9. Contact Box 230 V
- 10. SW 1 Booms, Driving, Outriggers
- 11. Outrigger Controls
- 12. Led Display
- 13. Light Outriggers Ok
- 14. Main Switch
- 15. Safety Harness Attachment

- 16. Fuel Meter
- 17. Choke
- 18. Throttle Lever
- 19. Fuel Valve
- 20. Engine Switch

## **LEGUAN® LIFTS**

High Set Tecno Oy Ylötie 1 FIN-33470 YLÖJÄRVI Phone+3583 3476400 Fax +3583 3476446 www.leguanlifts.com